Camera Sides

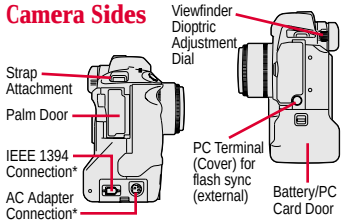

*Cover not shown

Back LCD Panel

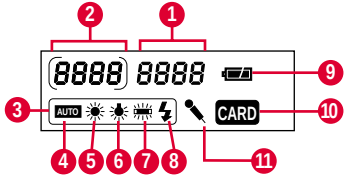

1. Remaining Frames
2. Frame Number
3. White Balance
4. Auto
5. Daylight
6. Tungsten
7. Fluorescent
8. Flash
9. Battery Status Icon
10. PC Card Icon
11. Microphone Icon

Top LCD Panel

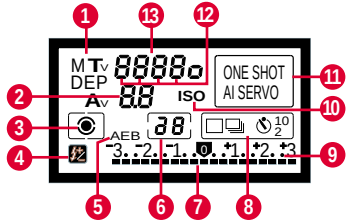

1. Shooting Modes—Manual Exposure: **M** Shutter Priority AE: **Tv** Bulb Exposure: **bulb** Program AE: **P** Aperture Priority: **Av**
2. Aperture Value or Custom Function Control or AEB Value or Depth-of-Field AE
3. Metering Modes (Partial; Evaluative; Fine Spot)
4. Flash Exposure Compensation
5. AEB
6. Bulb Exposure Time; Self-Timer Countdown
7. Exposure Level Indicator; Bulb Exposure Time; AEB Value Amount Indicator; Flash Exposure Compensation Value Indicator; Custom Function Setting Indicator
8. Drive Mode Indicator (Single Exposure; Continuous Exposure; Self-Timer—10 seconds, 2 seconds)
9. Exposure Compensation Value Index
10. ISO Indicator
11. AF Mode Indicator
12. Focusing Points
13. Shutter Speed; ISO; Battery Check (bc); Bulb (bulb); Depth-of-Field AE (dEP); Custom Function Control

Using the Digital Controls

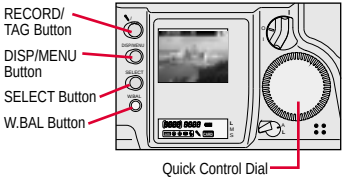

Display the Menu bar and select a Menu bar icon: Press and hold the DISP/MENU button and rotate the Quick Control dial until the desired icon is highlighted.

Display a dropdown menu: Highlight the Folder, Menu, or Display icon (see next page), and continue pressing the DISP/MENU button until the dropdown menu appears.

Choose an item from a dropdown menu: Continue pressing the DISP/MENU button and rotate the Quick Control dial until the desired menu choice is highlighted.

Choose an item from a menu screen (e.g., Main menu): Press and hold the SELECT button and rotate the Quick Control dial to highlight your choice.

Tag an image: Quickly press and release the RECORD/TAG button.

Record a sound file: Press and hold the RECORD/TAG button and speak into the microphone.

Select a White Balance setting: Press and hold the W.BAL button and rotate the Quick Control dial until the desired White Balance icons appear in the Back LCD panel.

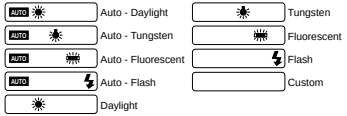

The Menu Bar

Folder Icon
Displays the Folder menu

Menu Icon
Displays choices for the Main, Properties, and Custom Functions menus

Display Icon
Displays choices for Single, Four, and Nine Image Review mode

Contrast Icon
Displays the Display Contrast screen where you can adjust image contrast

Kodak Professional

DCS 500 Series Digital Cameras

Batteries

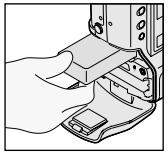

To power your camera, open the Battery/PC Card door, slide a battery to the back of the battery slot and press firmly in place.

☛ You can also power your camera with an AC adapter when working indoors or connected to a computer.

Check the battery icon on the Back LCD panel.

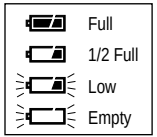

PC Card

As you capture images, they are stored on Type II or Type III PC Cards (PCMCIA cards) in your camera.

There are two slots for PC Cards. You can insert two Type II cards or one Type III card.

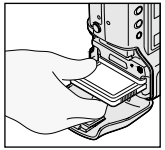

To insert a PC Card, open the Battery/PC Card door and insert.

With two cards, the first card inserted is the active card.

To select a different PC Card, select the Folder icon, then select the card. (Refer to the other side.)

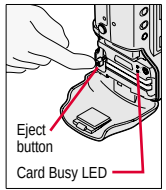

Important! Be sure the Card Busy LED is off before removing a PC Card. The blinking indicates data is being transferred to or from the PC Card. You can lose data if you remove a PC Card when it is busy.

To remove the PC Card, press the Eject button.

Camera Front

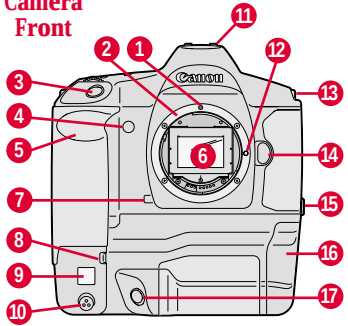

1. Lens Attachment Mark (red)
2. Lens Mount
3. Shutter Button
4. Self-Timer Indicator
5. Palm Door (to access Custom Functions)
6. Anti-aliasing or IR Filter
7. Depth-of-Field Preview Button
8. Vertical Control Switch
9. White Balance Sensor
10. Canon Remote Port
11. X Contacts (for flash attachments)
12. Lens Lock Pin
13. Strap Attachment
14. Lens Release Button
15. PC Terminal (Cover) for flash sync (external)
16. Battery/PC Card Door (to access battery and PC Card)
17. Vertical Shutter Release

Camera Back

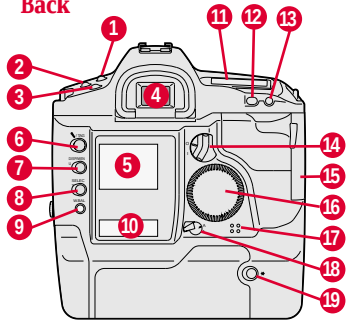

1. Shooting Mode Selector
2. AF Mode Selector
3. Metering Mode Selector/ Flash Exposure Compensation Button
4. Viewfinder Eyepiece
5. Image Display
6. RECORD/TAG Button
7. DISP/MENU Button
8. SELECT Button
9. W. BAL Button
10. Back LCD Panel
11. Top LCD Panel
12. AE Lock Button
13. Focusing Point Selector
14. Quick Control Dial Switch
15. Palm Door
16. Quick Control Dial
17. Microphone
18. Main Switch
19. Vertical AE Lock Button

Camera Top

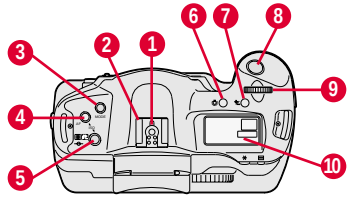

1. X Contacts
2. Accessory Shoe
3. Shooting Mode Selector
4. AF Mode Selector
5. Metering Mode Selector/ Flash Exposure Compensation Button
6. LCD Panel Illumination Button
7. Exposure Compensation Button
8. Shutter Button
9. Main Dial
10. Top LCD Panel

EASTMAN KODAK COMPANY
Rochester, New York 14650
© Eastman Kodak Company, 2000

Kodak and Kodak Professional are trademarks.
Printed in U.S.A. P/N 6B5237 5/00